
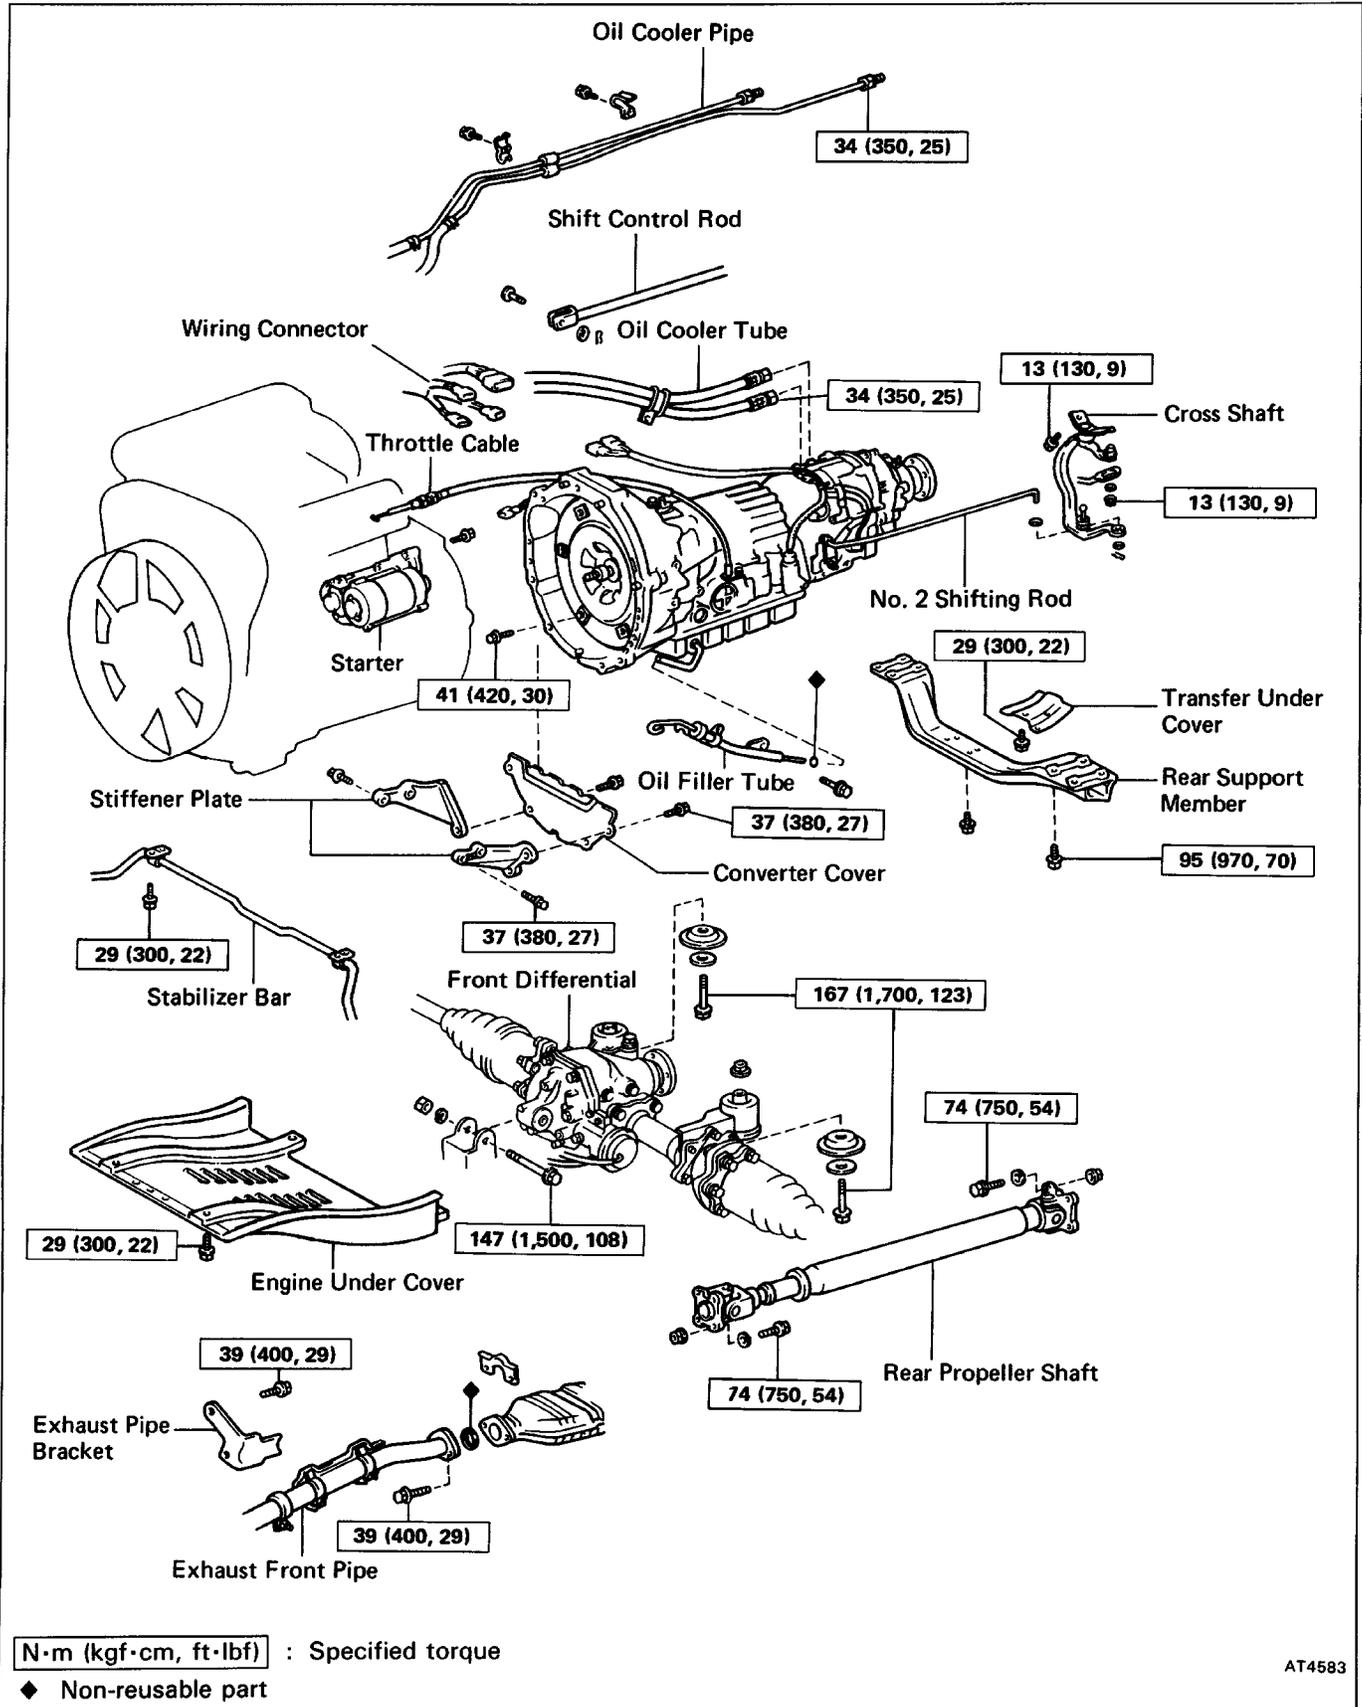
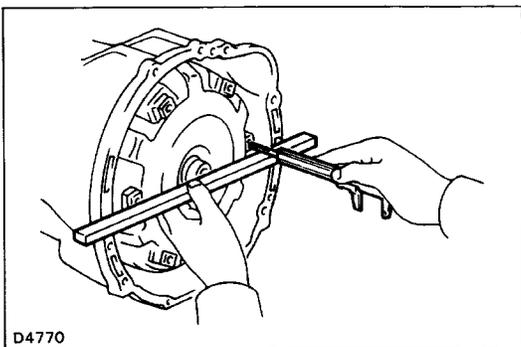


# REMOVAL AND INSTALLATION OF TRANSMISSION

Remove and install the parts as shown.

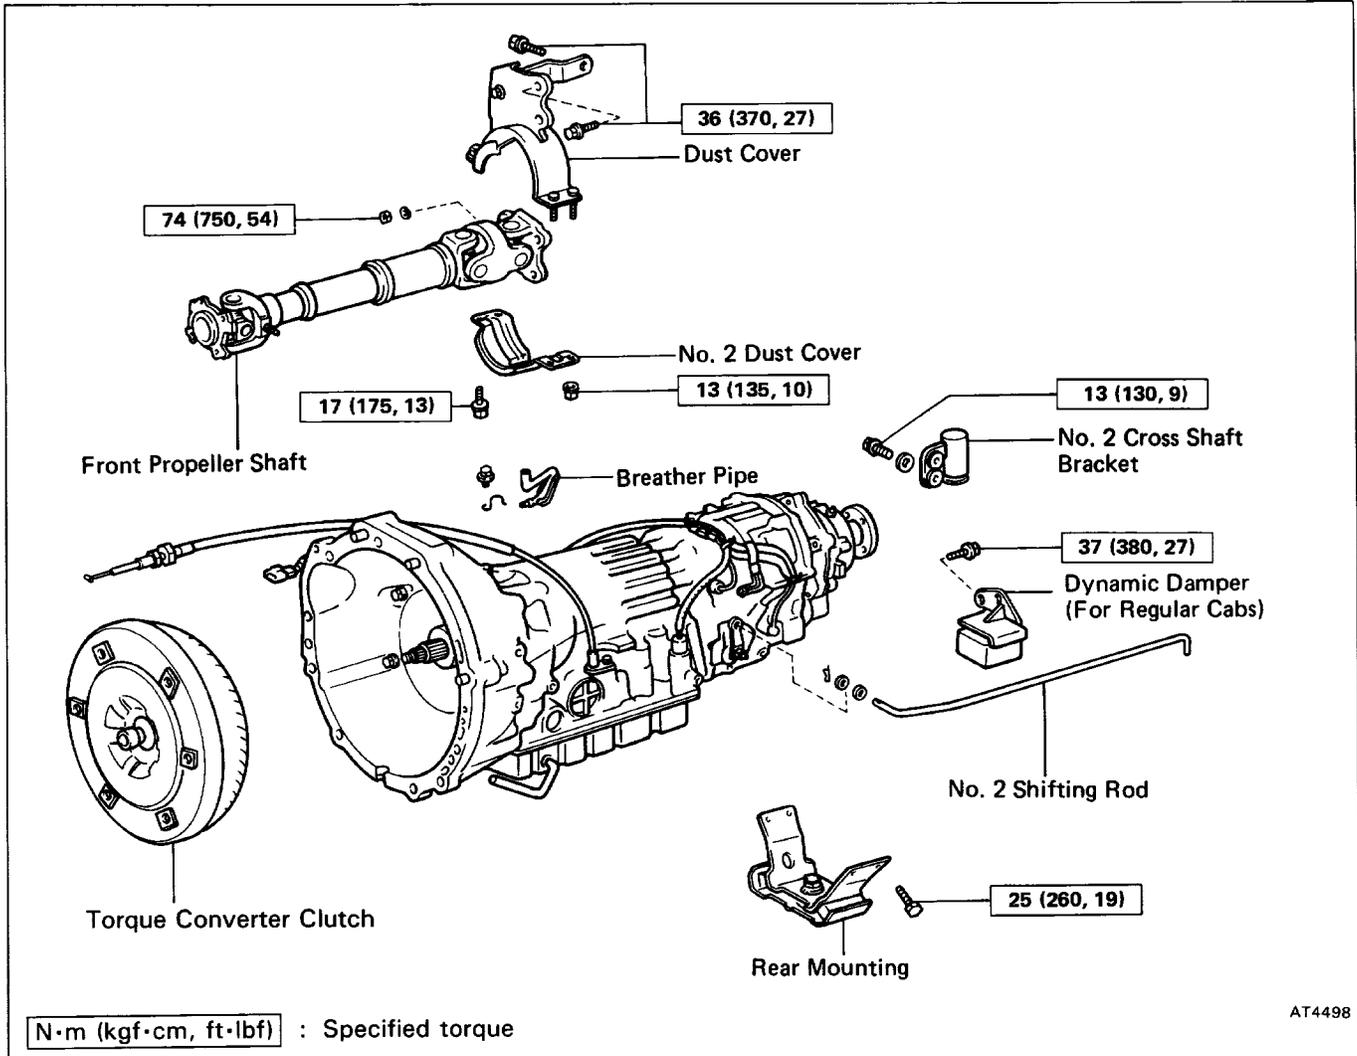

(Cont'd)

**(MAIN POINT OF INSTALLATION)****1. CHECK TORQUE CONVERTER CLUTCH INSTALLATION**

Using calipers and a straight edge, measure from the installed surface of the torque converter clutch to the front surface of the transmission housing.

Correct distance: 18.0 mm (0.709 in.)

If the distance is less than the standard, check for an improper installation.

**2. ADJUST TRANSMISSION THROTTLE CABLE**

(See page [AT-116](#))

**3. FILL TRANSMISSION WITH ATF AND CHECK FLUID LEVEL**

Fluid type: ATF DEXRON® II

**NOTICE:** Do not overfill.