
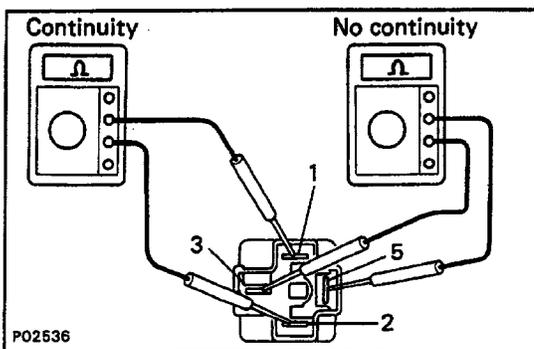


# EFI MAIN RELAY

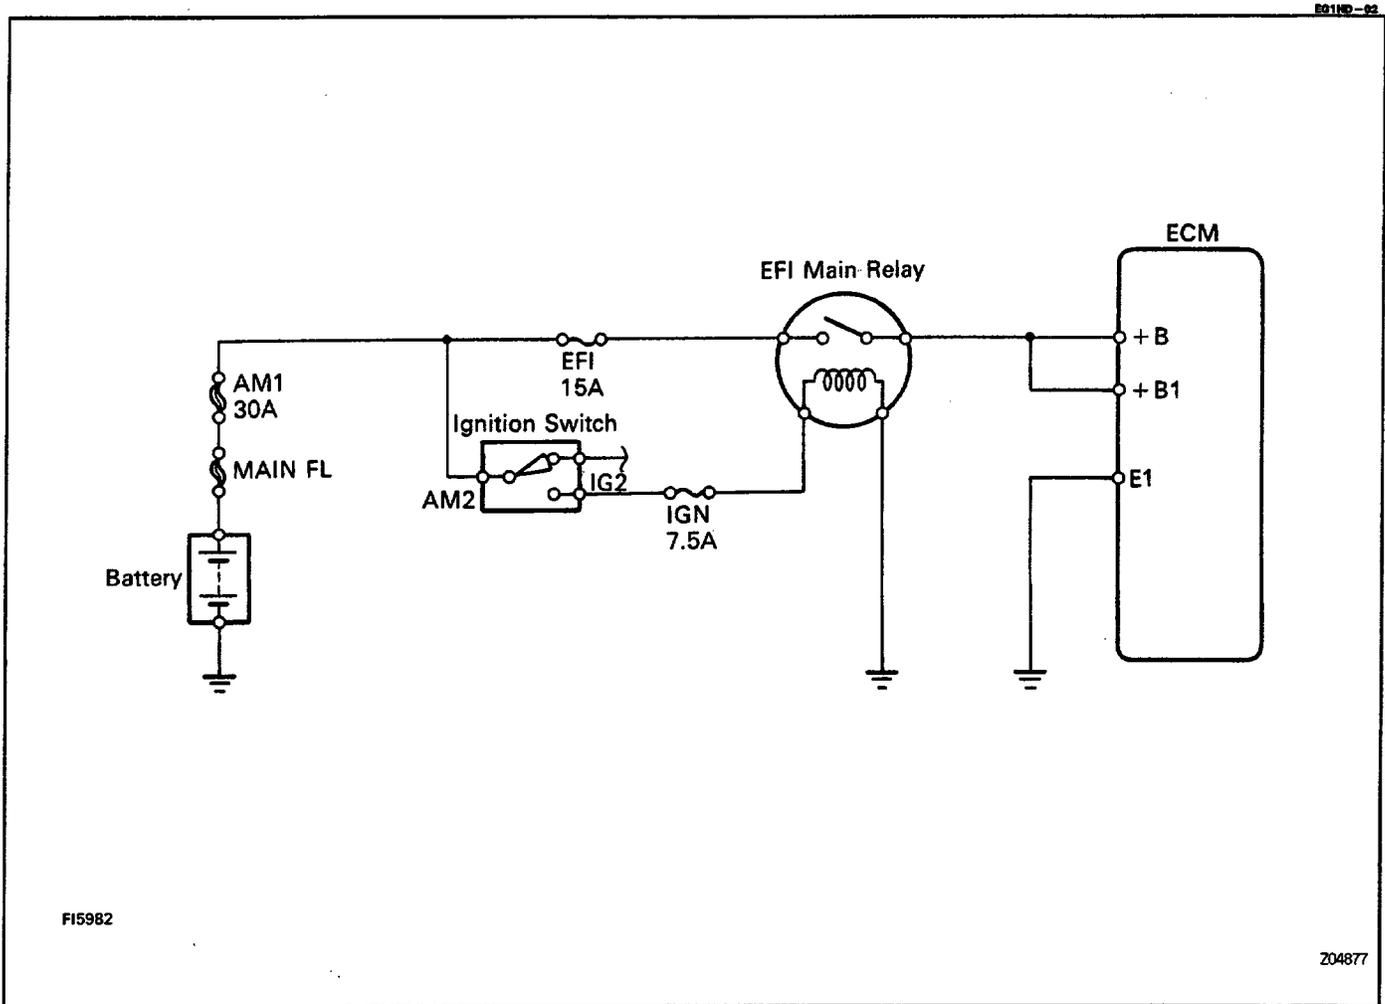

## EFI MAIN RELAY INSPECTION

### 1. INSPECT RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
- (b) Check that there is no continuity between terminals 3 and 5.
- (c) Check that there is no continuity between terminals 2 and 5.

If continuity is not as specified, replace the relay.

### 2. INSPECT RELAY OPERATION

- (a) Apply battery voltage across terminals 1 and 2.
- (b) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If operation is not as specified, replace the relay.

