
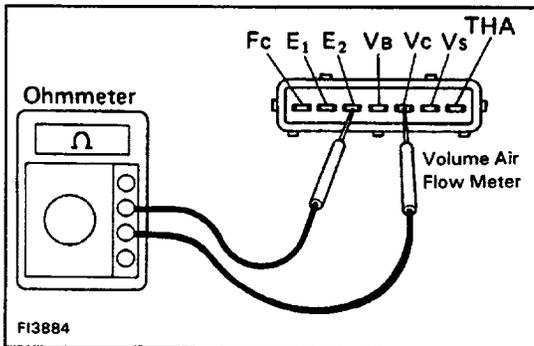


# VOLUME AIR FLOW (VAF) METER

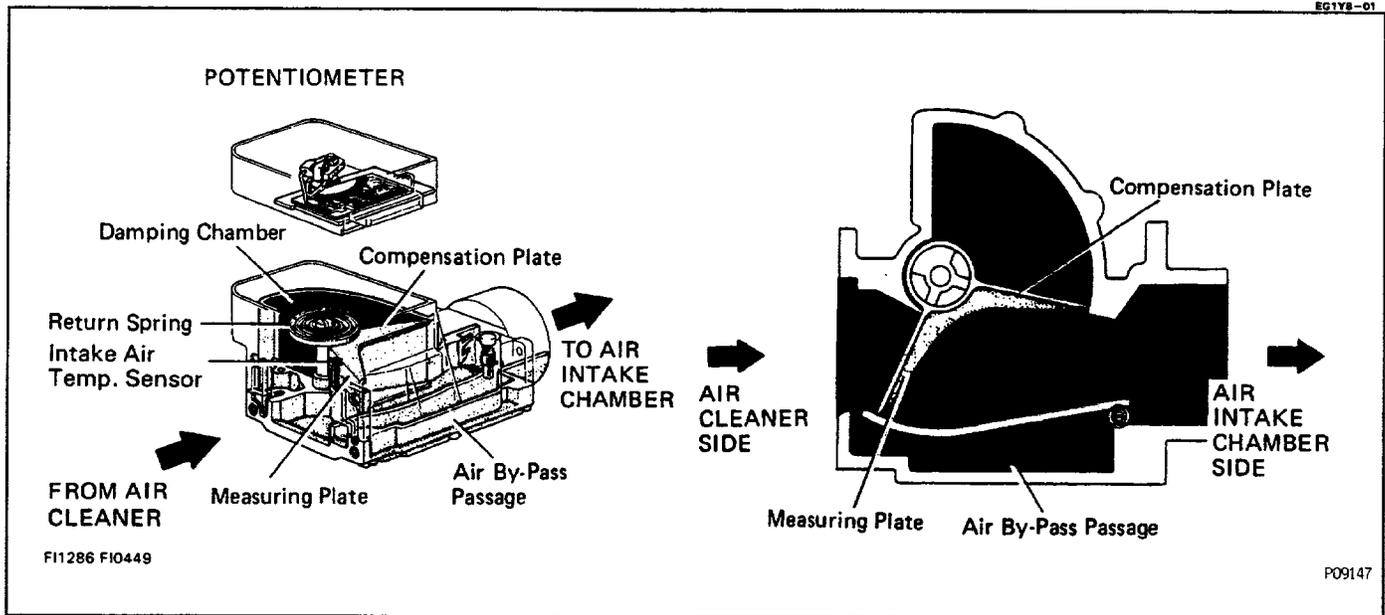


## ON-VEHICLE INSPECTION

EG1Y8-01

### MEASURE RESISTANCE OF VOLUME AIR FLOW METER

- Disconnect the connector from the volume air flow meter.
- Using an ohmmeter, measure the resistance between each terminal.

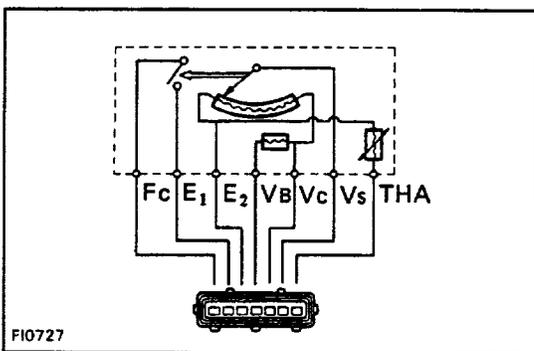


Between terminals	Resistance	Temperature
E <sub>2</sub> - V <sub>s</sub>	20 - 400 Ω	-
E <sub>2</sub> - V <sub>c</sub>	100 - 300 Ω	-
E <sub>2</sub> - V <sub>B</sub>	200 - 400 Ω	-
E <sub>2</sub> - THA	10 - 20 kΩ	-20°C (-4°F)
	4 - 7 kΩ	0°C (32°F)
	2 - 3 kΩ	20°C (68°F)
	0.9 - 1.3 kΩ	40°C (104°F)
	0.4 - 0.7 kΩ	60°C (140°F)
E <sub>1</sub> - F <sub>c</sub>	Infinity	-

V02175

If not within specification, replace the volume air flow meter.

EG1YA-01

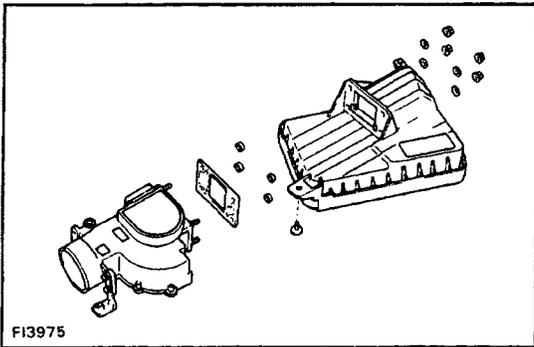

F13975


## VAF METER REMOVAL

1. DISCONNECT INTAKE AIR CONNECTOR
2. REMOVE AIR CLEANER CAP WITH VOLUME AIR FLOW METER

(a) Disconnect the volume air flow meter connector.  
 (b) Remove the air cleaner cap with volume air flow meter.

3. REMOVE VOLUME AIR FLOW METER

Remove the bolt, four nuts, washers, volume air flow meter and gasket.

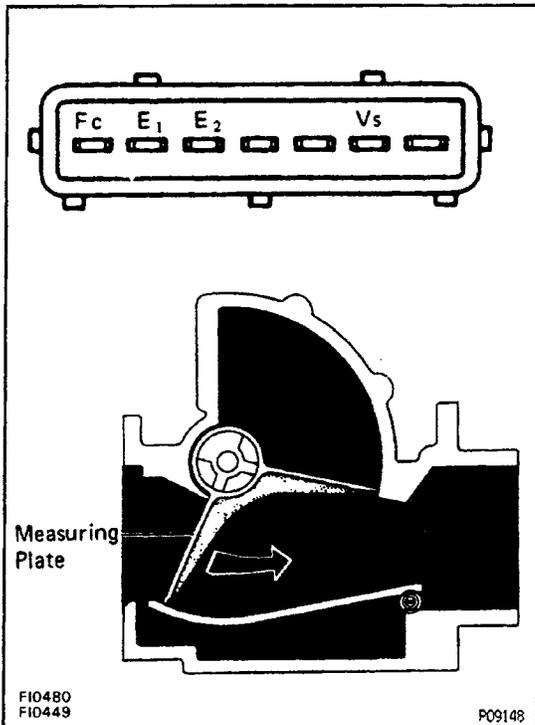F10480  
F10449

P09148

## VAF METER INSPECTION

EG1YB-01

### MEASURE RESISTANCE OF VAF METER

Using an ohmmeter, measure the resistance between each terminal by moving the measuring plate.

Between terminals	Resistance ( $\Omega$ )	Measuring plate opening
E1- Fc	Infinity	Fully closed
	Zero	Other than closed position
E2 - Vs	20-400	Fully closed
	20- 1,000	Fully open

HINT: Resistance between terminals E2 and Vs will change in a wave pattern as the measuring plate slowly opens.

## VAF METER INSTALLATION

EG1YC-01

1. INSTALL VOLUME AIR FLOW METER

Install the gasket, volume air flow meter, washers, nuts and bolt. Torque the nuts and bolt.

2. INSTALL AIR CLEANER CAP WITH VAF METER

(a) Install the air cleaner cap with VAF meter to the air cleaner case.

(b) Connect the VAF meter connector.

**3. INSTALL INTAKE AIR CONNECTOR**