


## SSM (SPECIAL SERVICE MATERIALS)

08826-00080 Seal packing or equivalent	Oil pan
--	---------

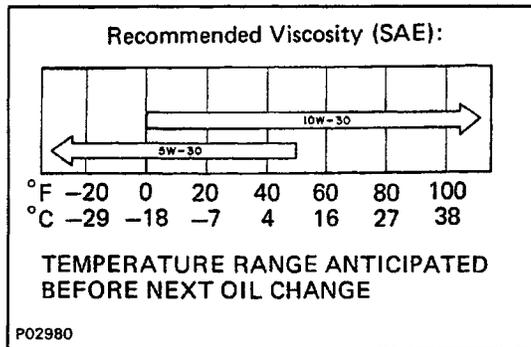

## OIL PRESSURE CHECK


### 1. CHECK OIL QUALITY

EG1UH-01

Check the oil for deterioration, entry of water, discoloring or thinning.


If oil quality is poor, replace.

**Oil grade: API grade SG Energy-Conserving II multigrade engine oil. Recommended viscosity is as shown.**

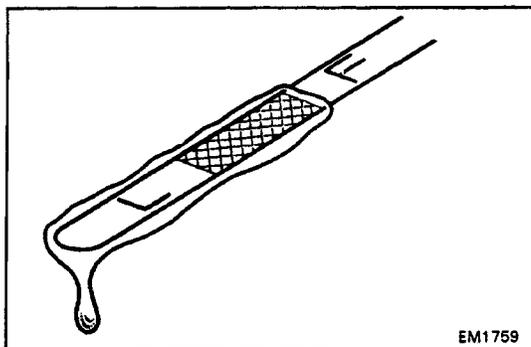

### 2. CHECK OIL LEVEL

The oil level should be between the "L" and "F" marks on the level gauge. If low, check for leakage and add oil up to the "F" mark.

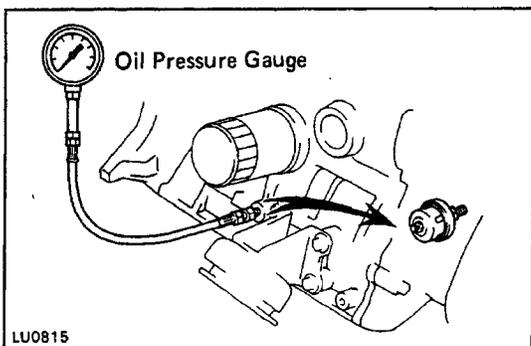

### 3. REMOVE OIL PRESSURE SENDER GAUGE

### 4. INSTALL OIL PRESSURE GAUGE

### 5. START ENGINE

Start the engine and warm it up to normal operating temperature.

### 6. MEASURE OIL PRESSURE

Oil pressure:

At idle speed

29 kPa (0.3 kgf/cm<sup>2</sup>, 4.3 psi) or more

At 3,000 rpm

245 - 490 kPa (2.5 - 5.0 kgf/cm<sup>2</sup>, 36 - 71 psi)

HINT: Check for oil leakage after reinstalling the oil pressure sender gauge.